

**SUPERIOR  
SEWING MACHINE  
ATTACHMENT**










**FOR  
DARNING**


**MAKING BUTTONHOLES  
SEWING ON BUTTONS  
ATTACHING ZIPPERS  
OVERCASTING SEAMS  
QUILTING**



**FITS  
ALL MAKES  
• OF •  
MACHINES**

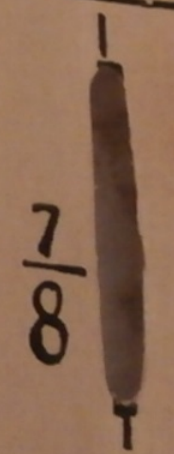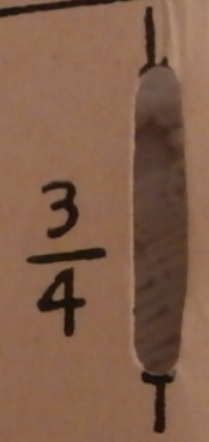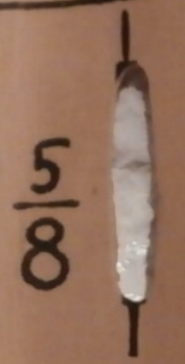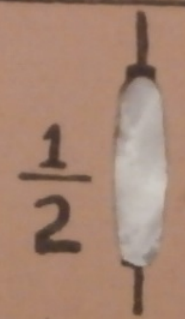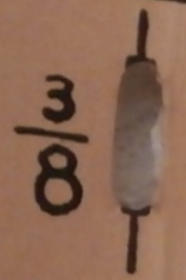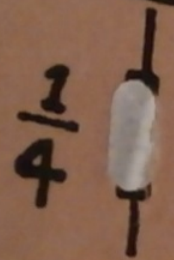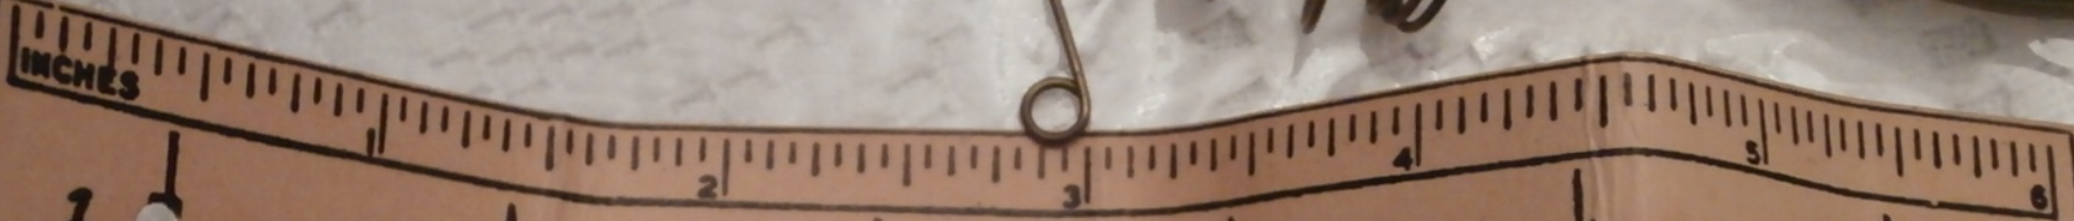


Lay the straight side of rule against the edge of the material where you want the Buttonhole and mark in slot with pencil.

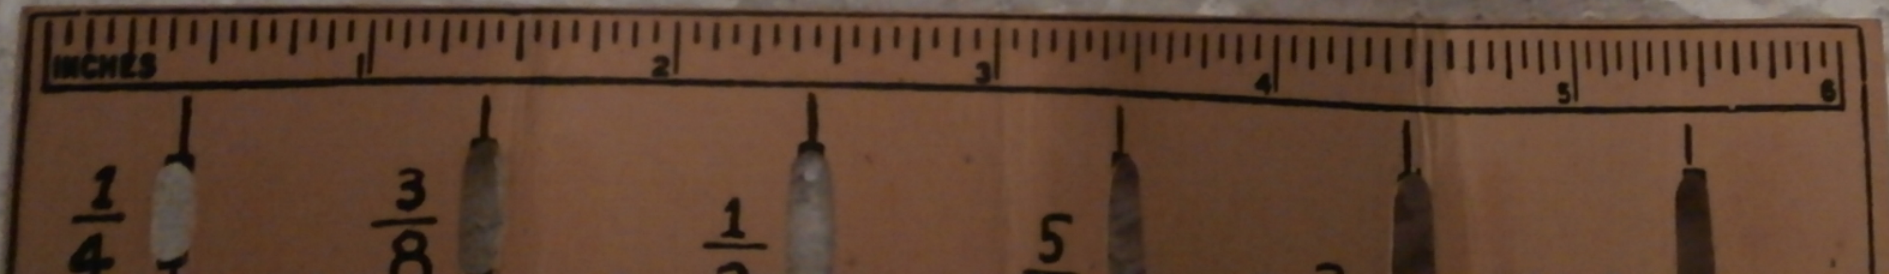

## ATTACH ZIPPERS


Baste zipper on material. Lower presser foot lever. Hold zipper and material **FIRMLY** and **TIGHTLY**. Move both zipper and material **SLOWLY** down the edge of the zipper. To learn to sew straight, practice with two pieces of paper. If loops show on the back, tighten top tension.

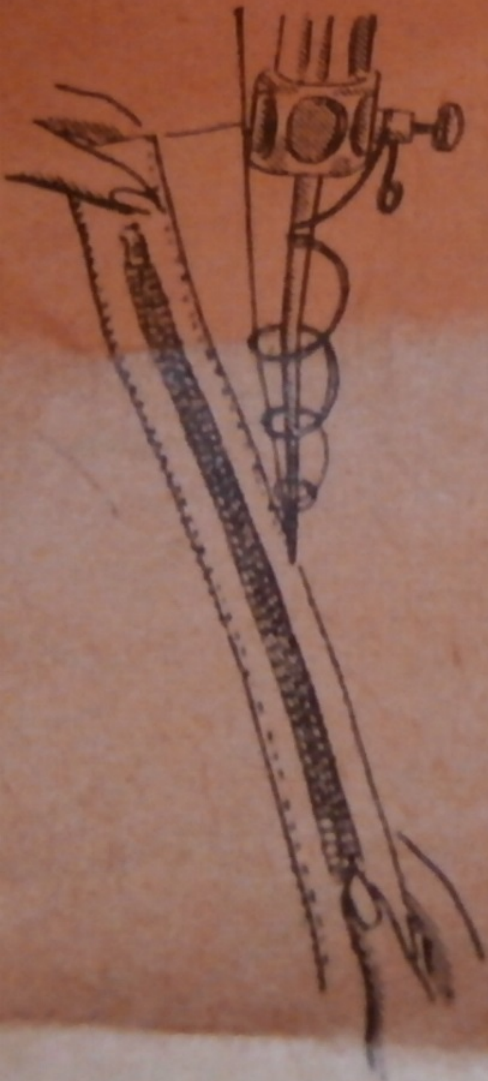


## SEW ON BUTTONS, HOOKS AND EYES, SNAPS

Use number 60 or 70 thread. Lower presser foot on machine. **RUN MACHINE SLOWLY WITH YOUR HAND** so as not to break needle. Hold button in place with left hand, run machine with your right hand.

Move button back and forth 10 or 15 times. Finish by making four stitches in the same place. You need not tie the ends.

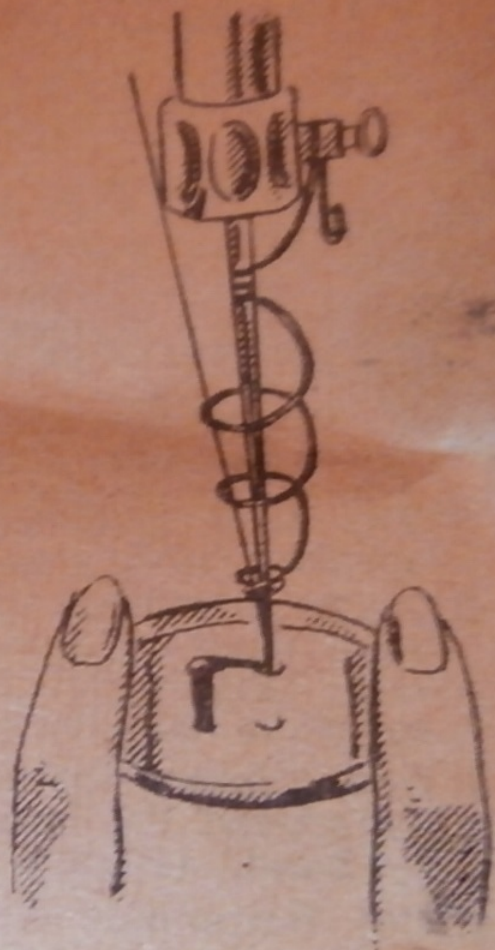

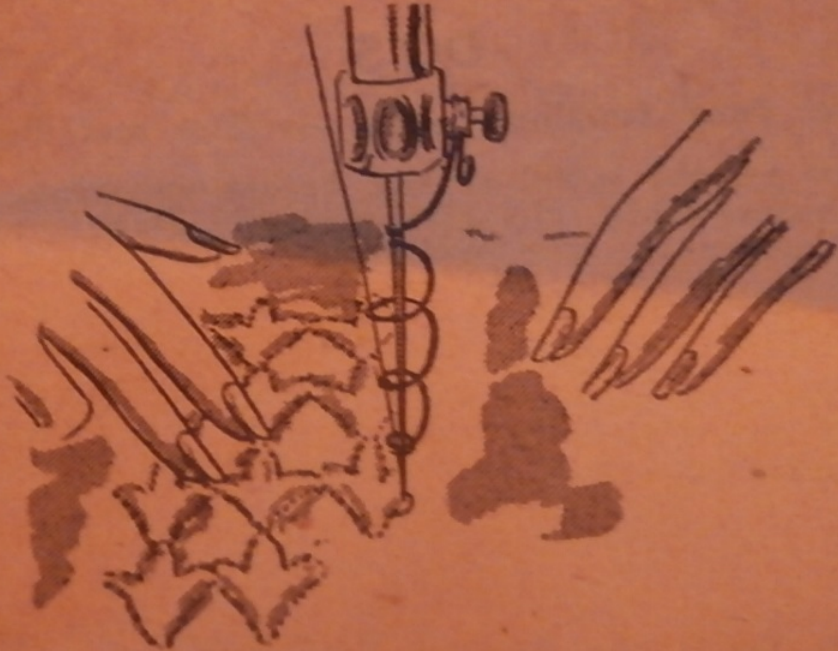

## QUILTING

Use 60 thread or mercerized thread. Lower presser foot lever. Mark, or stamp material to be quilted. Cotton batten or wool filling can be used. Follow design without turning the quilt. Run machine fast and move the material slowly. If needle breaks you are moving the material too fast. When working on a large quilt, work from the middle to the edge.

---

**TO APPLIQUE LACE:** You do not need to baste the lace; simply put needle through lace and material, hold material and lace with thumb and finger of each hand, pressing down with finger. Now sew and zig-zag your goods, working towards the left. Be sure to cross over edge of the material each time. It is unnecessary to hem as action makes salvage edge.

**TO EMBROIDER:** Use embroidery floss or cotton on the bobbin and a mercerized thread on top through the needle. Follow your patterns.

**TO MONOGRAM:** Thread your machine as for embroidery. Please place carbon paper on under side of material, write name or monogram on right side of cloth. Turn it over and follow pattern made by carbon marks.

For embroidery work and monogramming, it is best to lower the feed dogs of the machine.



## DO'S

1. Have your tensions even — Top and Bottom.
2. Darn an old towel or rag before you make buttonholes. This will give you the idea how you can move the material in any direction.
3. Be sure the material on the Embroidery hoop is **TIGHT** when you make the buttonholes.
4. If you are working on fine material it is better **NOT** to PAD the buttonhole. Just make two rows of stitches—then sew sideways as illustrated.

## DONT'S

1. Don't leave the Presser Foot lever UP at any-time. Put it DOWN.
2. Don't move the material Fast. Move Slowly.
3. Don't use SMALL HOOP that comes with the set for making buttonholes—use a regular EMBROIDERY HOOP — it is larger and tighter.
4. When you PAD the buttonhole it is not necessary to make the TWO ROWS of stitches as illustrated.
5. Don't use cotton thread for buttonholes. Use mercerized thread only.

***We include two springs, they both do the same work, one is a spare.***

---

Don't use cotton thread for buttonholes. Use  
mercerized thread only.

*We include two springs, they both do the  
same work, one is a spare.*

---


Complete Set . . . . .	\$1.00
EXTRA SPRINGS . . . . .	.25c
EXTRA HOOPS . . . . .	.25c

---

**REDDEN SALES COMPANY**  
8754 INDIANA AVENUE

Mark for  
USE SM  
material  
MERCE  
FOOT L  
(ma

1. Make  
where  
DO N  
mach
2. PAD  
each  
end,  
to m
3. Sew  
all ar  
by h
4. Cut  
If th  
If th

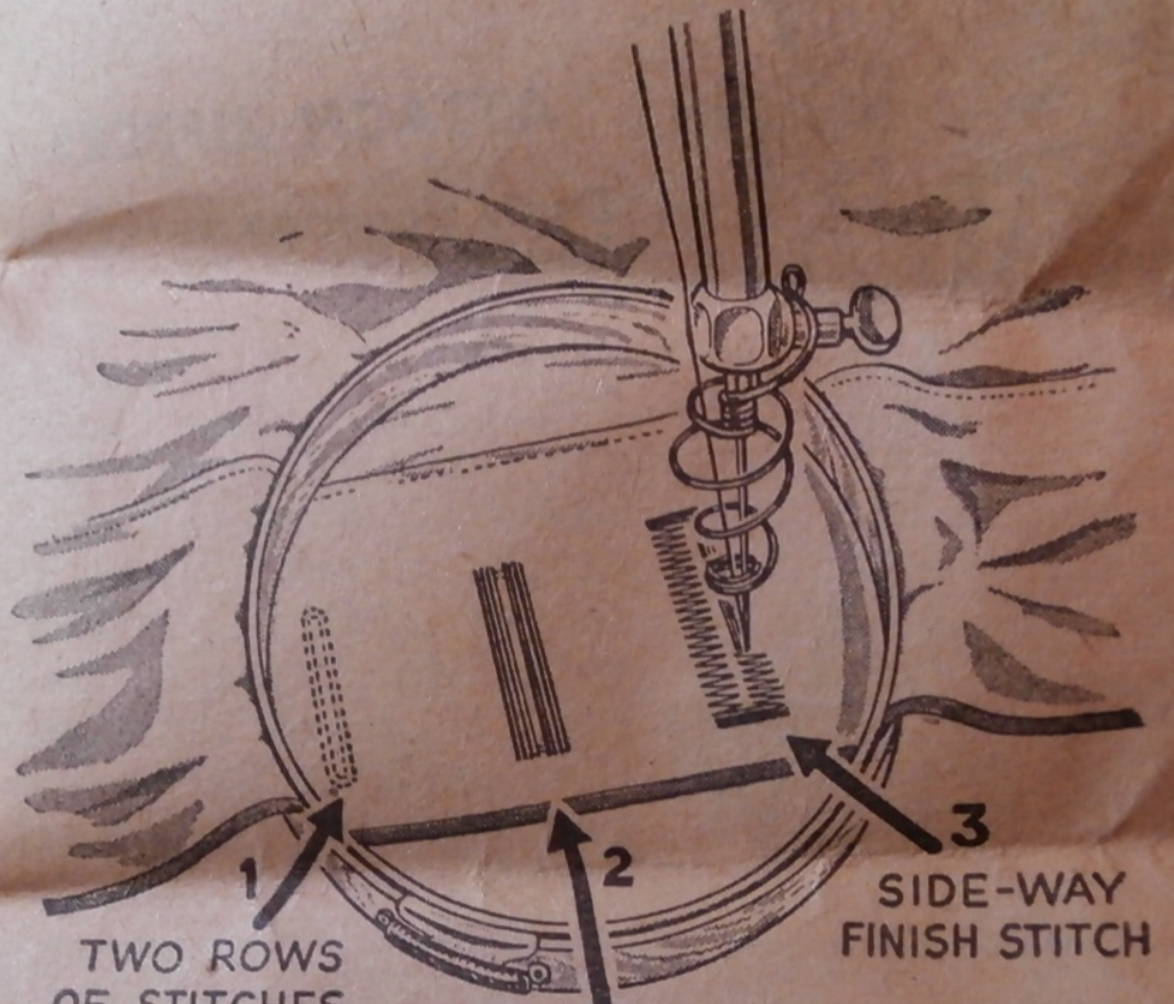

**1**  
TWO ROWS  
OF STITCHES  
(Guide hoop  
with your hand)

**2**  
FOUR LONG STITCHES  
TO PAD BUTTON HOLE  
On Top of  
Each Other

**3**  
SIDE-WAY  
FINISH STITCH  
On Top of  
Padding

# BUTTONHOLE DIRECTIONS

Mark location and size of buttonhole with pencil. **DO NOT USE SMALL HOOP** that comes with the set. Place material in a regular embroidery hoop as illustrated. Use **MERCERIZED THREAD** only. **LOWER PRESSER FOOT LEVER.**

(make buttonhole first and cut afterwards)

1. Make two rows of stitches on **TOP OF EACH OTHER** where you marked it. (Figure 1). Note: From now on **DO NOT USE YOUR FEET OR ELECTRIC.** Run machine with your **HAND** on the wheel to control it.
2. **PAD BUTTONHOLE**—Make four long stitches on each side of buttonhole—four short stitches on each end. (Figure 2). Note: On **FINE** material, some prefer to make the buttonhole without padding.
3. Sew sideways on top of padding . . . Continue sewing all around the buttonhole. Be sure to run your machine by hand. (Figure 3).
4. Cut buttonhole with scissors or razor blade to finish. If threads are loose on the **BACK**, tighten top tension. If threads are loose on the **TOP**, loosen top tension.

# NEW IMPROVED SUPERIOR DARNER

FITS ALL MACHINES

## DIRECTIONS

Remove the pressure-foot and thumb screw from the machine. Also any extra piece on foot bar like some machines have.

Place attachment on the needle with the ARM over the needle-clamp as shown in illustration. Thread the machine as usual for sewing, drop thread down through the center of spring and then through the eye of the needle.

**NOTICE**—Be sure the lever that raises the pressure-foot is **Down** while darning.

Place hoop in stocking wherever the hole is and place the rubber band around the outside to hold it while darning.

Now gather the stocking with your **FINGERS INSIDE** the stocking and edge it under the needle.

**DO NOT GUIDE WORK FAST** but run machine fast and the work **SLOWLY**. Sew back and forth across the hole the first time making a foundation, turn work and sew across again making it solid.

Do not blame the Darner for your mistakes. If needle breaks you are invariably guiding work too fast, bending needle, causing it to miss hole in feed plate. If thread breaks find the cause, as the Darner is only a foot on the needle.

## WHAT KIND OF THREAD TO USE

For men's or children's stockings use 60 or 70 cotton thread or mercerized thread, in shuttle and in needle. Silk thread for silk stockings. For table linen, sheets, pillow cases and lace curtains use 60 or 100 cotton thread. Swimming Suits and Sweaters use wool in Bobbin and No. 60 thread on Top of Machine.

**FOR PATCHING** don't use hoop, place patch on back of hole and sew around the edge of it, or back and forth.

For **RIPS** and **TEARS** hold ends of rip firmly and sew back and forth. For a Three Corner Tear fix corner first and finish up like rips.

**FOR BINDING AND OVERCASTING SEAMS** hold the edge firm and sew back and forth on the edge of material.



# REDDEN SALES CO.

Indiana Ave.

Chicago 19, Ill.

Made in U. S. A.

## DIRECTIONS

Remove the pressure-foot and thumb screw from the machine. Also any extra piece on foot bar like some machines have.

Place attachment on the needle with the ARM over the needle-clamp as shown in illustration. Thread the machine as usual for sewing, drop thread down through center of spring and then through the eye of the needle.

**NOTICE**—Be sure the lever that raises the pressure-foot is **Down** while darning.

Place hoop in stocking wherever the hole is and place the rubber band around the outside to hold it while darning.

Now gather the stocking with your **FINGERS INSIDE** the stocking and edge it under the needle.

**DO NOT GUIDE WORK FAST** but run machine fast and the work **SLOWLY**. Sew back and forth across the hole the first time making a foundation, turn work and sew across again making it *solid*.

Do not blame the Darnet for your mistakes. If needle breaks you are invariably guiding work too fast, bending needle, causing it to miss





and edge it under the needle.

**DO NOT GUIDE WORK FAST** but run machine fast and the work **SLOWLY.** Sew back and forth across the hole the first time making a foundation, turn work and sew across again making it solid.

Do not blame the Darnet for your mistakes. If needle breaks you are invariably guiding work too fast, bending needle, causing it to miss hole in feed plate. If thread breaks find the cause, as the Darnet is only a foot on the needle.


### **WHAT KIND OF THREAD TO USE**

For men's or children's stockings use 60 or 70 cotton thread or mercerized thread, in shuttle and in needle. Silk thread for silk stockings. For table linen, sheets, pillow cases and lace curtains use 60 or 100 cotton thread. Swimming Suits and Sweaters use wool in Bobbin and No. 60 thread on Top of Machine.

**FOR PATCHING** don't use hoop, place patch on back of hole and sew around the edge of it, or back and forth.

For **RIPS** and **TEARS** hold ends of rip firmly and



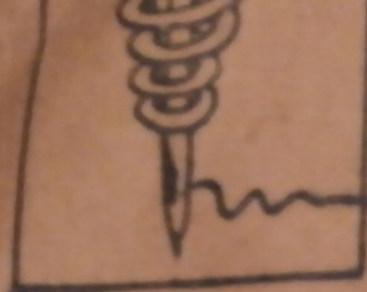

find the cause, as the Darner  
only a foot on the needle.

### WHAT KIND OF THREAD TO USE

For men's or children's stockings use 60 or 70 cotton thread or mercerized thread, in shuttle and in needle. Silk thread for silk stockings. For table linen, sheets, pillow cases and lace curtains use 60 or 100 cotton thread. Swimming Suits and Sweaters use wool in Bobbin and No. 60 thread on Top of Machine.

**FOR PATCHING** don't use hoop, place patch on back of hole and sew around the edge of it, or back and forth.

For **RIPS** and **TEARS** hold ends of rip firmly and sew back and forth. For a Three Corner Tear fix corner first and finish up like rips.

**FOR BINDING AND OVERCASTING SEAMS** hold the edge firm and sew back and forth on the edge of material.

## REDDEN SALES CO.

534 Indiana Ave.

Chicago 19, Ill.

Made in U. S. A.